
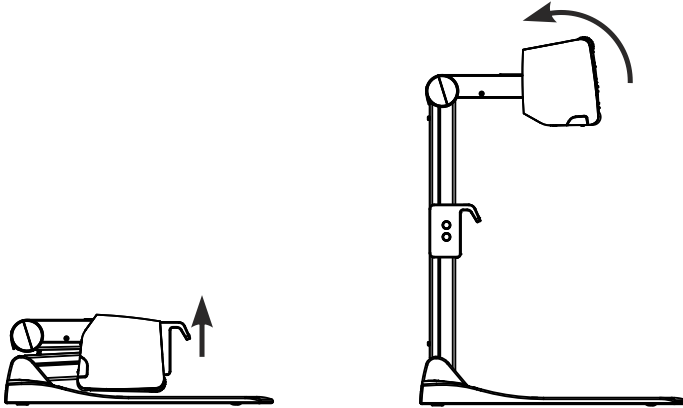


# Quick Setup Guide - First Steps

## Before Starting

Connect power supply and monitor or projector.  
Raise the arm up and turn the camera to working position.

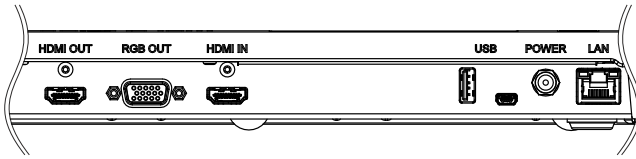

## Power Key



Switch the Visualizer on by pressing the POWER key.

## Basic Menu Settings

When the Visualizer is switched on the first time, the Quick Setup Guide will be started automatically on-screen (visible on HDMI and RGB output). Use the arrow keys to navigate through the menu.

### Language

Select the desired language for the on-screen menu.

### Ethernet Settings

The IP-address, Subnet Mask and Gateway IP-address can be set automatically by a DHCP-server or manually.

### Time Settings

The Visualizer offers the possibility to use the internal clock or an external time server (a time valid time server IP address and internet connection are required).

Further information is available at [www.wolfvision.com](http://www.wolfvision.com) and on the supplied CD-ROM.